 


# Saab 95

## Quick Reference Guide

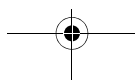

## SAFETY BELTS


**Note:** The following is an overview of your vehicle safety features and is not intended to replace the specific instructions found in your vehicle Owner Manual. Please read your Owner Manual for complete details about your vehicle safety features.

### Safety Belts

Safety belts are the single most effective safety devices in your vehicle. **DO NOT** let anybody, including rear seat passengers, ride in the vehicle without buckling their safety belts, or child safety seats.

To wear the safety belt properly (for adults only):


- 1 Close and lock the door.
- 2 Adjust the seat so you can sit up straight.
- 3 Pick up the latch plate and pull the belt across you.
- 4 Push the latch plate into the buckle until it clicks.
- 5 Check that the belt fits snugly. The lap part of the belt should be worn low and snug on the hips, just touching the thighs. The shoulder belt should go over the shoulder and across the chest. To make the lap part tight, pull up on the shoulder belt.

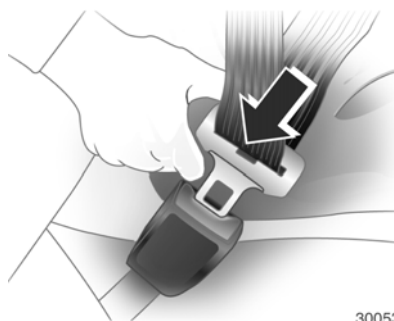

30053



Adjust the safety belt so that it is as high as possible. The belt should be well in on the shoulder.

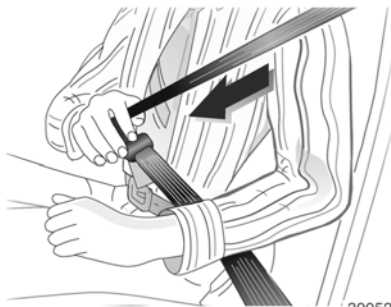


30052

This Quick Reference Guide provides an overview of some important features and functions in your 2011 model year Saab 9-5. More detailed operating information as well as important safety information associated with the proper care and use of the vehicle can be found in your Owner's Manual. Carefully review the Owner's Manual before operating the vehicle.

Some optional equipment \* described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.

\* denotes optional equipment

## INSTRUMENT PANEL

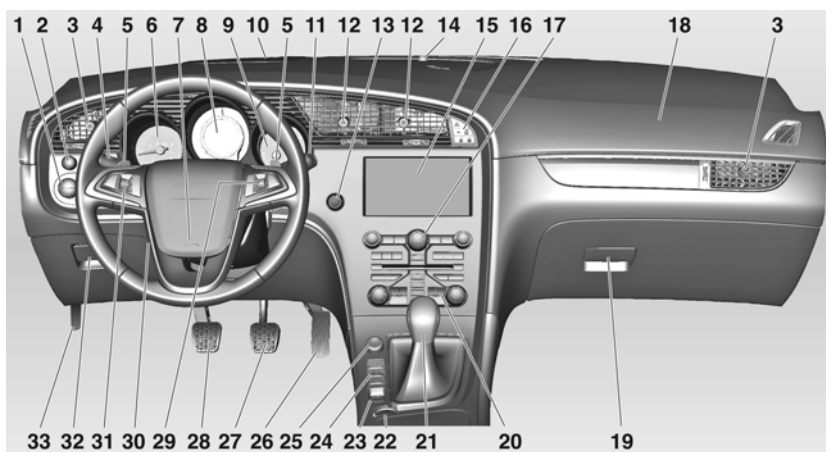

- |   |   |
|---|---|
| 1 Light switch  | 20 Climate control system   |
| 2 Head-Up display operation switch *                                    | 21 Selector lever   |
| 3 Side air vents  | 22 Start/Stop button  |
| 4 Turn and lane-change signals, headlight flash, low beam and high beam | 23 Parking brake  |
| 5 Steering wheel shifter for automatic transmission *                   | 24 Universal parking assist *, Advanced parking aid *, Lane departure warning * |
| 6 Tachometer  | 25 Traction Control system, Electronic Stability Program                        |
| 7 Horn  | 26 Accelerator pedal  |
| 8 Speedometer, odometer, Driver Information Center                      | 27 Brake pedal  |
| 9 Fuel gauge, boost gauge, engine coolant temperature gauge             | 28 Clutch pedal   |
| 10 Head-Up display *  | 29 Audio/Phone controls   |
| 11 Windscreen wiper, windscreen washer system, headlight washer system  | 30 Steering wheel adjustment  |
| 12 Center air vents   | 31 Cruise control   |
| 13 Night panel  | 32 Storage compartment, fuse box  |
| 14 Anti-theft alarm system status LED                                   | 33 Hood release lever   |
| 15 Info-Display   |   |
| 16 Hazard warning flashers, child locks, central locking system         |   |
| 17 Infotainment system  |   |
| 18 Front passenger airbag   |   |
| 19 Glovebox   |   |

**Note:** Refer to your Owner's Manual to learn about the information being relayed by the lights and gauges of the instrument cluster, as well as what to do to help ensure safety and prevent damage to your vehicle.

**See Instruments and Controls in your Owner's Manual.**

## KEYLESS REMOTE CONTROL



### Lock

Press to lock all doors, the trunk and the fuel filler door. The driver's door will not lock if the door is open.

### Passive Entry\*

Touch the sensor field of the exterior door handle on one of the front doors. All doors, load compartment and fuel filler flap are locked.

If the driver's door is not closed properly, the central locking system will not work.

3 seconds must pass before the vehicle can be unlocked. Within this time, it is possible to check whether the vehicle is locked.

**Note:** The passive entry system does not lock the vehicle automatically.

The sensor fields in the door handles must be kept clean to ensure unrestricted functionality.

### Unlock

Press to unlock the driver's door only or all doors, the trunk and the fuel filler door.

The unlock setting can be changed in the Vehicle Settings menu by using the audio system controls.

### Trunk




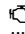 











Press to unlock and open the trunk. The trunk also can be opened manually by pressing the button above the license plate if the vehicle is unlocked.

### Panic Alarm

  Press and hold for three seconds to activate the alarm. The turn signal lamps will flash and the horn will sound for 30 seconds, or until the button is pressed again or the ignition is turned on.

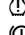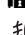**See Keys, Doors and Windows in your Owner's Manual.**
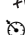 
## Symbols

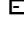 	Safety Belt Reminder		Oil Pressure		Electronic Stability Program/Traction Control Off
	Check Engine		Airbag Readiness		Electronic Stability Program/Traction Control Warning
	Low Tire Pressure		Security		Lights On
	Brake System Warning		Foglamps		
	Antilock Brake System Warning		Cruise Control Set		
	Charging System		Traction Control Off		

## START/STOP BUTTON



### Starting the Engine

With the remote control in the vehicle and the vehicle in Park or Neutral, press the brake pedal and then press the START/STOP button to start the engine.

**Note:** If the remote control battery is weak, place the remote control in the pocket near the cupholder in the center console to enable the engine to start.

### Stopping the Engine

With the vehicle stopped, press the brake pedal, shift to Park and then press the START/STOP button to turn off the engine.

### Accessory Power Mode

With the engine off and without pressing the brake pedal, press the START/STOP button once to operate some accessories.

### Ignition On Power Mode

 
With the engine off and without pressing the brake pedal, press and hold the START/STOP button for 3 to 5 seconds to operate all electrical functions.

**See Driving and Operating in your Owner's Manual.**


## REMOTE ENGINE START\*




If available, this feature allows the engine to be started from outside the vehicle with the remote control.

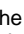The button  will be on the remote control if the vehicle has remote engine start.

### Starting the Engine


- The selector lever has to be in **P** and the vehicle has to be locked.
- Press and hold  until the turn signal lamps flash. This confirms the request to remote start the vehicle has been

received. Once the engine is started, the parking lamps will turn on and remain on as long as the engine is running.

- Unlock the vehicle by pressing  before entering.
- Press button **Start/Stop** once, press brake pedal and move selector lever out of **P** to drive the vehicle.

The remote engine start has an approximate range of up to 50 ft (15 metres). It can be restricted by external influences.


### To switch off the engine after a Remote Engine Start


- Press and hold  until the parking lamps turn off.
- Turn on the hazard warning flashers.
- Turn the ignition on and then back off.

 

**See Driving and Operating in your Owner's Manual.**

## POWERDOOR LOCKS/CHILD SAFETY LOCKS



- Press the  **Rear Door Child Lock** button on the center of the instrument panel to prevent a rear door from opening from the inside.

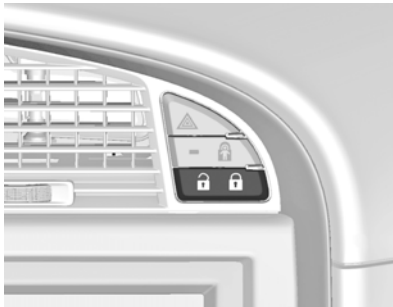

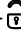- Press the power door  **Unlock**/ **Lock** button on the center of the instrument panel to unlock or lock all doors.

***See Keys, Doors and Windows in your Owner's Manual.***

## POWER SEATS

### Power Seat Adjustment




1. Length and height
2. Seatback angle

*See Driving and Operating in your Owner's Manual.*

## DRIVER INFORMATION CENTER

The Driver Information Center on the instrument cluster displays a variety of vehicle system information and warning messages.

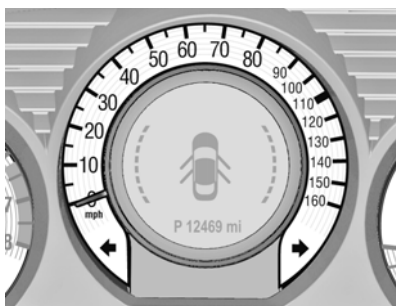

### • MENU

Press to display the:


- **Trip menu/Fuel Information menu** (digital speedometer, trip odometers, fuel range, average fuel consumption, instantaneous fuel consumption, average vehicle speed, distance, estimated time of arrival, and navigation \*).
- **Vehicle Information menu** (units, speed warning, battery voltage, remaining oil life, tire pressure, and compass).

- Rotate the switch to scroll through the items of each menu.

### • SET/CLR

Press to set or clear the displayed menu item or warning message.

*See Instruments and Controls in your Owner's Manual*

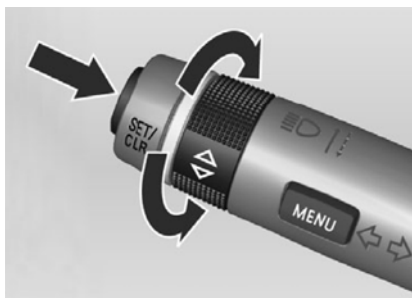

## HEAD-UP DISPLAY \*

The Head-Up Display (HUD) projects a range of vehicle information on the windshield, reducing the need to look away from the road.



### OFF

Turn fully counterclockwise to turn off the display.

### Brightness

Rotate to brighten or dim the display.

### PAGE

Press to select one of three display formats.




### Up/Down

Press to adjust the up/down position of the display.

***See Instruments and Controls in your Owner's Manual***



## CLIMATE CONTROLS

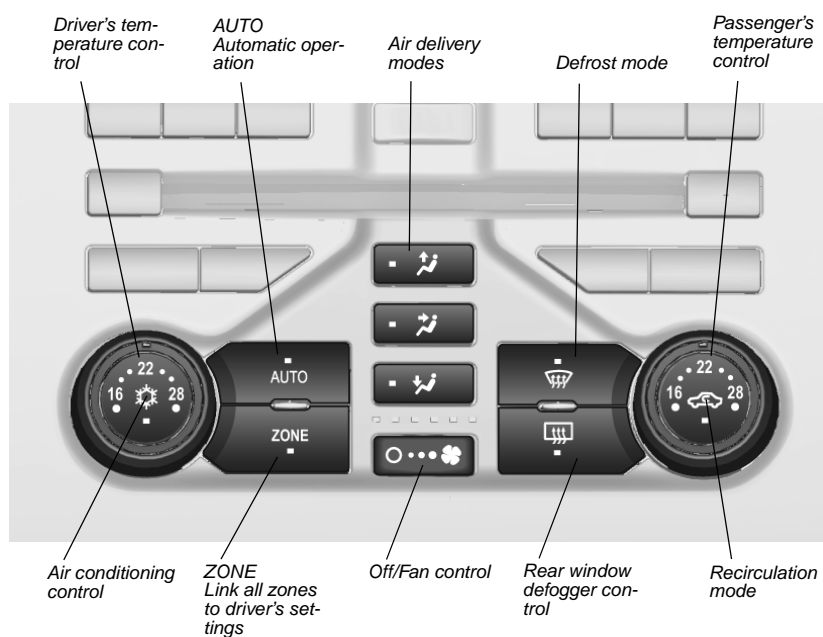


### Automatic Operation

1. Press **AUTO**.
2. Set desired temperature. Allow time for the system to automatically reach the desired temperature. The fan speed and air distribution automatically regulate the airflow.

**Note:** The recirculation mode can help to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle. When the recirculation mode is used without air conditioning, the air humidity increases and the windows may fog.

**See Climate Controls in your Owner's Manual.**

## AUDIO SYSTEM

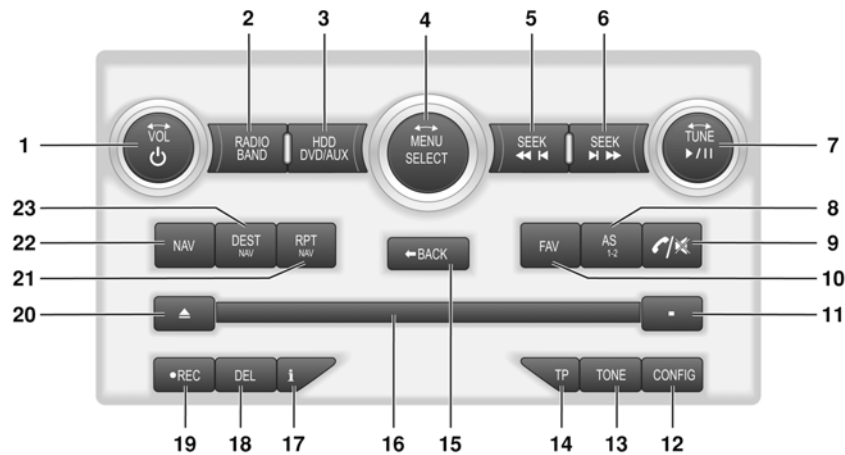

- |  |  |
|--|--|
| 1 Power/ Volume                                      | 10 Display pages of favorite radio stations or stored favorites list |
| 2 RADIO BAND: FM, AM, XM                             | 11 LED, disc inserted  |
| 3 Play an audio file, DVD or portable audio device * | 12 Open the Settings menu  |
| 4 Open or select menus                               | 13 Open the Sound menu   |
| 5 SEEK: Previous radio station, track or file        | 14 Time setting  |
| 6 SEEK: Next radio station, track or file            | 15 Move back in a menu   |
| 7 Tune radio stations or play/pause audio or video   | 16 Disc slot   |
| 8 Auto Store list                                    | 17 Song information  |
| 9 Phone menu or mute the speakers                    | 18 Delete current file *   |
|  | 19 Record content *  |
|  | 20 Eject disc  |
|  | 21 Repeat voice guidance *   |
|  | 22 Navigation map screen *   |
|  | 23 Destination screen *  |

Audio system with HDD/DVD/CD and Navigation shown

**See Infotainment System in your Owner's Manual.**

**Note:** Avoid extended searching for specific items or configuring system settings while driving.

### Setting the Time

- 1 Turn on the radio.
- 2 Press the **TP** button, or press the **CONFIG** button until the time settings are displayed.
- 3 Use the **MENU/SELECT** knob to adjust the time, date and day settings; press the knob to select it.
- 4 The new time settings will be displayed after exiting the screen.

### Storing Favorite Stations

Radio stations from all bands (AM, FM or XM) can be stored in any order on up to six pages of favorites.

- 1 Tune in the desired radio station.
- 2 Press the **FAV** button to display the page where the station is to be stored.
- 3 Press and hold one of the six numeric buttons until a beep is heard, indicating it is stored.
- 4 Repeat the steps for each button on each page.

### Portable Audio Devices

A 3.5mm auxiliary input jack and a USB port are located under the armrest in the center console.

A portable device connected to the auxiliary input jack can be controlled only by using the portable device controls. To optimize speaker volume, fully increase the volume level of the portable device.

Compatible devices connected to the USB port can be controlled by the audio system. **Not all devices may be supported.** Use the **MENU/SELECT** knob and the audio steering wheel controls to access various functions.

### Hard Drive Device. (Navigation System only)

The Hard Drive Device (HDD) is able to record music from CDs and USB devices.

### ● REC

Press to record the current song or all songs to memory.

### TUNE/▶/II Play/Pause

Turn to view the recorded files; then press to select the desired file.

### Timeshift Live Radio \*

20 minutes of live radio content is stored to the HDD when listening to a station.


### ▶/■ Play/Pause

Press to pause radio audio. Press again to resume playback of timeshifted audio.

The timeshift status bar shows the amount of stored content. When the radio station is changed, content is cleared and restarted for the new station.

**See Infotainment System in your Owner's Manual.**

## AUDIO STEERING WHEEL CONTROLS

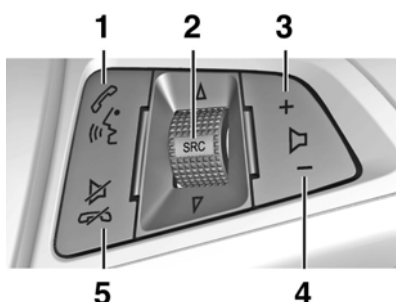

- 1. Push to Talk**  
Press to interact with the OnStar, Bluetooth, or navigation system \*.
- 2. SRC Source**  
Press to select an audio source.
- 3. Volume**, press + to increase.
- 4. Volume**, press – to decrease.
- 5. End Call/Mute**  
Press to end or reject an OnStar or Bluetooth call.  
Press to mute the vehicle speakers.

**See Infotainment System in your Owner's Manual.**

## CRUISE CONTROL



### Setting Cruise Control

- 1 Press the **On/Off** button. The **Cruise Control** symbol illuminates in white in the instrument cluster.
- 2 When traveling at the desired speed, rotate the **SET/-** switch down to set the speed. The **Cruise Control** symbol illuminates in green in the instrument cluster.

**Adjusting Cruise Control**  
**RES/+ Resume/Accelerate** Rotate the switch up to resume a set speed. When the system is active, rotate the switch up to increase speed.

**SET/- Set/Coast**  
When the system is active, rotate the switch down to decrease speed.

**Cancel**  
Press to cancel the cruise control but retain the set speed in memory. Pressing the brake pedal also will cancel the cruise control. Turn off cruise control or the vehicle ignition to erase the cruise control set speed.

**See Driving and Operating in your Owner's Manual.**

## VEHICLE PERSONALIZATION


Some vehicle features can be customized using the controls on the audio system.



- 1 Press the **CONFIG** button to view the Settings menu.
- 2 Turn the **MENU/SELECT** knob to highlight the Vehicle Settings menu; press the knob to select it.
- 3 Turn the **MENU/SELECT** knob to highlight the desired settings menu; press the knob to select it.
- 4 Turn the **MENU/SELECT** knob to highlight the desired item in the menu; press the knob to select it.
- 5 Turn the **MENU/SELECT** knob to highlight the desired selection; press the knob to select it.
- 6 Press the **BACK** button to exit each menu.
- 7 Repeat these steps to select other menu items.

*See Driving and Operating in your Owner's Manual.*

## WINDSHIELD WIPERS

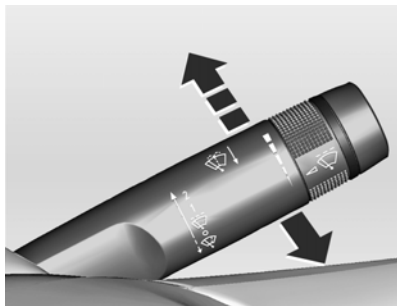


- 2 **Fast**
- 1 **Slow**
- Automatic Wiping with Rain Sensor \***  
The rain sensor detects the amount of water on the windshield and automatically activates the wipers. Rotate the band to adjust the sensitivity of the sensor. The wipers activate more often as the band is moved up.
- Off**
- Mist**  
**Washer Fluid**  
Pull the lever toward you to spray washer fluid on the windshield.

*See Driving and Operating in your Owner's Manual.*

## NAVIGATION SYSTEM\*

Touch the highlighted screen buttons to select various functions in the on-screen menus.

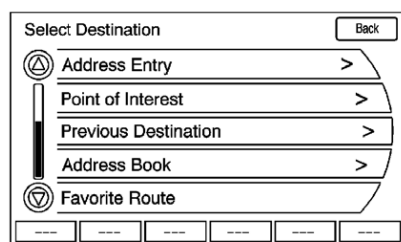

### Entering a Destination

- 1 Press the **DEST** hard key.
- 2 The Select Destination screen displays several options. Touch the **Address Entry** screen button to enter a specific address.
- 3 Enter the State/Province, City and Street name. Touch the **List** screen button to select the desired name from the generated list for each entry.
- 4 Enter the house number.
- 5 Touch the **OK** screen button.
- 6 A confirmation screen displays the address. If correct, touch the **Go** screen button.
- 7 Select the route preference and touch the **Start** screen button.

To plan a route using another method, select one of the other options from the Select Destination screen.

**See your Navigation System Owner's Manual**

## PARKING ASSIST\*

Ultrasonic sensors in the front and rear bumpers help you avoid colliding with objects when parking the vehicle. The system operates only at speeds less than 5 mph. Detected objects are indicated by audible beeps. The interval between the beeps becomes shorter as the vehicle gets closer to an object. A distance display in the Driver Information Center also indicates the distance to an object in front of the vehicle.



To turn the system on/off, press the **Park Assist** button next to the shift lever. The button illuminates when the system is on.  
**Note:** The system may be disabled if dirt, snow or ice builds up on the sensors. Keep the vehicle clean for proper operation.

**See Driving and Operating in your Owner's Manual.**

### Advanced Parking Aid \*

The advanced parking aid system manoeuvres the driver into a parking slot by giving instructions on the Driver Information Center and acoustic signals. It is the driver, however, who bears full responsibility for accepting the parking slot suggested by the system and the parking manoeuvre.

The system uses the sensors of the parking assist system in combination with two additional sensors on both sides of the front bumper.

**Note:** Under certain circumstances, various reflective surfaces on objects or clothing as well as external noise sources may cause the system to fail to detect obstacles. Sensor could detect a nonexisting object (echo disturbance) caused by external acoustical or mechanic disturbances.

**Caution:** Performance of the sensor can be reduced when sensors are covered, e.g. by ice or snow.

Special conditions apply if there are taller vehicles involved (e.g. off-road vehicles, mini vans, vans). Object identification in the upper part of the vehicle cannot be guaranteed.



When looking for a parking slot, the system has to be activated by pressing the Advanced Parking Aid button. The system only operates at a speed up to 19 mph. The maximum allowed parallel distance between the vehicle and a row of parking cars is 6 ft (1.8 meter).



System is active



System is giving instructions on the Driver Information Center

**See Driving and Operating in your Owner's Manual.**

## ELECTRIC PARKING BRAKE



To apply the parking brake, press the brake pedal and then pull up the **(P) Parking Brake** switch by the shift lever.

- To release the parking brake, press the brake pedal, turn on the ignition, and then press the **(P) Parking Brake** switch.

**See *Driving and Operating in your Owner's Manual.***

## DRIVE SENSE\*

The Drive Sense system adapts to the driving style and preference of the driver within one of three driving modes.

The system automatically adjusts the continuous damping control, accelerator pedal control, steering control, all-wheel drive control and the automatic transmission in real time to personalize your driving experience.



### **C - Comfort**

Turn the knob toward the C position for a smooth, comfortable driving style. The C indicator will illuminate.

### **I - Intelligent (Default)**

Turn the knob to the I position for normal city and highway driving. The I indicator will illuminate. This mode is active each time the vehicle is started.

### **S - Sport**

 
Turn the knob toward the S position for a sportier driving style with more responsive handling. The S indicator will illuminate. The Sport mode settings can be changed in the Vehicle Settings menu by using the audio system controls.

**See *Driving and Operating in your Owner's Manual.***



## TIRE PRESSURE

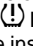

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by illuminating the  **Low Tire Pressure** warning light on the instrument cluster. The warning light will remain on until the tire pressure is corrected. **Current tire pressures can be displayed using the Driver Information Center.** The proper tire pressures for your vehicle are listed on the Tire and Loading Information label, located below the driver's door latch.

	Comfort with up to 3 people		ECO with up to 3 people		Full Load	
Tires	Front	Rear	Front	Rear	front	Rear
	psi (kPa/bar)		psi (kPa/bar)		psi (kPa/bar)	
	39 (270/2.7)		–	–	41 (280/2.8)	46 (320/3.2)
225/50 R17	39 (270/2.7)		–	–	41 (280/2.8)	46 (320/3.2)
235/45 R18						
225/55 R17	41 (280/2.8)		43 (300/3.0)		41 (280/2.8)	47 (330/3.3)
245/45 R18	41 (280/2.8)		45 (310/3.1)		41 (290/2.9)	47 (330/3.3)
245/40 R18						
245/40 R19	38 (260/2.6)		–	–	41 (280/2.8)	45 (310/3.1)

**See Vehicle Care in your Owner's Manual.**

## 9-5 ACCESSORIES

See your Saab dealer for the latest 9-5 accessories or visit the Owner's section of [www.saabusa.com](http://www.saabusa.com) for the latest accessory offerings.

## ROADSIDE ASSISTANCE

**In U.S.A. - 1-800-852-9001**  
**In Canada - 1-800-567-4555**

As the owner of a new Saab, you are automatically enrolled in the Saab Roadside Assistance program, which provides roadside service for 4 years/50,000 miles at no expense to you. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Saab's Roadside Assistance toll-free number is staffed by a team of technically trained advisors who are available 24 hours a day, 365 days a year, to provide minor repair information, contact a service provider or make arrangements to tow your vehicle to the nearest authorized Saab dealership.

## ON STAR

If you require roadside service and have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

For more information about OnStar services, press the OnStar button, refer to the OnStar Owner's Guide, call 1-888-466-7827 or visit [www.onstar.com](http://www.onstar.com).

## CUSTOMER ASSISTANCE CENTER

**In U.S.A. - 1-800-955-9007**  
**email: [saab-crm@saabusa.com](mailto:saab-crm@saabusa.com)**

**In Canada - Saab Customer Assistance**  
**Center 1-877-919-Saab**

The Saab Customer Assistance Center is a helpful resource for Saab owners. If you have any questions concerning your vehicle, its equipment, or warranty information, please contact the Customer Assistance Center or your Saab dealer.

**Note:** *Saab and OnStar assistance phone numbers should be added to your cell phone contact list.*

**Note:** *Add these important numbers and your dealers number into your Mobile phone.*

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2010 Saab Cars North America, Inc. All Rights Reserved.



Identification Number US/CA  
000080 MY11

